 


# Light-Weight

## 88keys Folding Piano

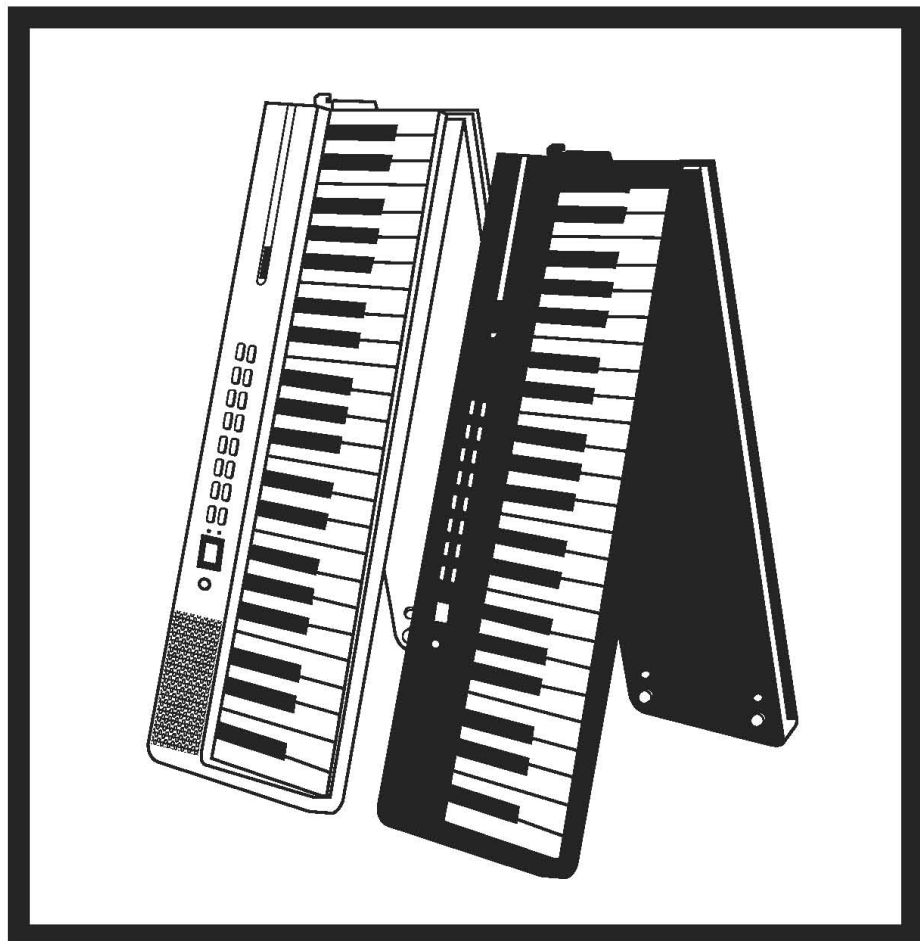 


# Instruction Manual


Please read the instructions carefully before use



# I: Function Panel Diagram

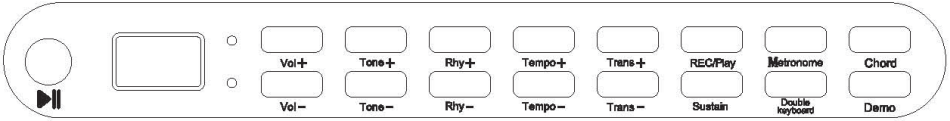

## II: Interfaces

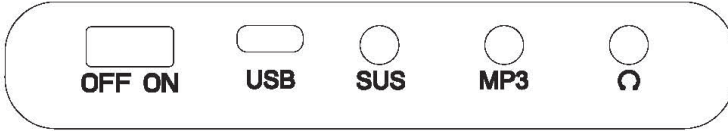 

- 1.USB: Type\_C charging/transmitting MIDI
- 2.SUS: pedal sustain function
- 3.MP3: audio input function
- 4.🎧 : Headphone & Speaker

## III: Charging

### Charging indicator:

- 1.Type\_c interface
- 2.It is not applicable to PD fast charging line
- 3.The charging indicator is red and turns green when it is full
- 4.Battery: charging time is about 5H, please charge it more than 6H for the first time
- 5.Power adapter: 5V/2A

## IV: Functions

Play/Pause, Volume Adjustment, Tone, Rhythm, Tempo, Transposition, Record/Playback, Sustain, Metronome, Dual Keyboard, Chord, Demo Songs

### Play/Pause

- 1.Press the button  to enter the Play/Pause playback mode. The digital display shows the rhythm number.
- 2.When the metronome, demo songs, rhythm, and other functions are activated, press this button to stop.

### Volume

- 1.Press the Vol+ and Vol- buttons to adjust the volume (from V00 to V15).
- 2.The default volume at startup is level 12.
- 3.Long-press Vol+ for a quick increase and long-press Vol- for a quick decrease.
- 4.Simultaneously press and hold Vol+ and Vol- to return the volume to level 12.

### Tone

- 1.Press Tone+ or Tone- to select a tone from 000 to 127 (refer to the attached Tone List).
- 2.Long-press Tone+ for a quick increase and long-press Tone- for a quick decrease.
- 3.Simultaneously hold Tone+ and Tone-, and the tone resets to zero, selecting the grand piano tone.

## Rhythm

1. Press Rhy+ or Rhy- to select a rhythm from 000 to 127 (refer to the attached Rhythm List).
2. Long-press Rhy+ for a quick increase and long-press Rhy- for a quick decrease.
3. Simultaneously hold Rhy+ and Rhy-, and the rhythm resets to zero, playing the 0th rhythm.

## Tempo

1. After activating demo songs, rhythm, or metronome, press Tempo+ or Tempo- to adjust the speed.
2. Press Tempo+ or Tempo- to adjust the tempo, with values ranging from 40 to 280.
3. Long-press Tempo+ for a quick increase and long-press Tempo- for a quick decrease.
4. Simultaneously hold Tempo+ and Tempo-, and the speed returns to the initial value.

## Transposition

1. Press Trans+ or Trans- to adjust transposition from -6 to 6. Default is 0 at startup.
2. Long-press Trans+ for a quick increase and long-press Trans- for a quick decrease.
3. Simultaneously hold Trans+ and Trans-, and transposition returns to 0.

## REC/Play (Long press for recording, short press for playback)

1. Hold the REC/Play button, and after a beep, the keyboard is ready to record MIDI signals.
2. Short press the REC/Play button to playback the previously recorded signal.

## Sustain

 
1. Press the Sustain button to activate the sustain function; press again to deactivate.
2. When sustain is activated, playing produces a sustained effect on the tone.

## Metronome

1. Press the Metronome button to cycle through beats: 1/4, 2/4, 3/4, 4/4.
2. Use the button to stop the metronome during playback.
3. While using the metronome, press Tempo+ or Tempo- to adjust the metronome's speed.

## Dual Keyboard (Split)

1. Press the Double Keyboard button to activate the dual keyboard function; press again to deactivate.
2. When the dual keyboard is active, the keyboard is divided into two distinct zones.

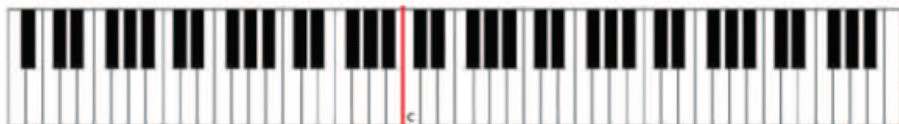

Dual keyboard OFF: A2-b  
Dual Keyboard On: A1-b1

Dual keyboard OFF: c1-c5  
Dual Keyboard On: C-c3

## Chord

1. Activate the Rhythm function first, then press the "Chord" button to enable the chord function. Repeatedly press the "Chord" button to choose between single-finger (SGL), multi-finger (FGr), and chord off options.
2. Selecting single-finger (SGL) produces chord effects by playing single notes in the chord function keyboard area; Choosing multi-finger (FGr) requires playing various chords in the chord function keyboard area to produce chord effects.
3. Chord function keyboard area: A2 to f#.

## Demo Songs

1. Press the Demo button to play demo songs. The display shows "dEn" and then displays the demo song number.
2. Demo songs range from 000 to 020 (refer to the attached Demo Song List).
3. Press the Demo button again to play the next song.
4. Long-press the Demo button, and the digital display quickly switches demo songs. When you release the Demo button, the displayed demo song plays.
5. Stop demo song playback using the Power On/Off button.
6. While playing demo songs, press Tempo+ or Tempo- to adjust the speed.

# V: Bluetooth App Functions:

## Connecting with an iPhone:

### POP Piano Connection:

1. Scan the QR code to download the POP Piano app.
2. After turning on Bluetooth on your phone, open the POP piano app, choose any song, and select "Start Playing."
3. Click on the upper right corner of the phone screen  , then choose "Connect via Bluetooth." Search for "GZUT-MIDI" and confirm the connection.  
Next, follow the steps to complete the Bluetooth connection to the piano.
4. Once the Bluetooth connection is confirmed, the icon will display a blue check mark 

## Connecting with an Android Phone:

### POP Piano Connection:

1. Scan the QR code to download the POP Piano app.
2. Turn on Bluetooth; some phones may require enabling location services.
3. Open the POP Piano app, choose any song, and select "Start Playing."
4. Click on the upper right corner of the phone screen  , then choose "Connect via Bluetooth." Search for "GZUT-MIDI" and confirm the connection.  
Next, follow the steps to complete the Bluetooth connection to the piano.
5. Once the Bluetooth connection is confirmed, the icon will display a blue check mark 

## Bluetooth Audio:

To use Bluetooth audio:

Open your phone settings and search for the Bluetooth name "GZUT-MUSIC."

After connecting to Bluetooth, open your phone's music app, and you'll be able to enjoy beautiful music.

## Demo List

0	Castle in the Sky
1	Song of Joy
2	Little Stars
3	By Alice
4	Dancing Girl
5	Deskmate
6	Ten Years
7	Colourful Clouds Chasing The Moon
8	In My Song
9	CrystlLake
10	Green Sleeves
11	Milk Song
12	A comme amour
13	Les premiers sourires de Vanessa
14	Snowdreams
15	Bandari
16	Edelweiss
17	Dance of fireflie
18	My soul
19	Croatian Rhapsody
20	CSIKOS POST

## Tone List

### Piano

0	Piano 1
1	Piano 2
2	Piano 3
3	Honky-Tonk Piano
4	Rhodes Piano
5	Chorused Piano
6	Harpsichord
7	Clavinet

### Percussion instrument

8	Celesta
9	Glockenspiel
10	Music Box
11	Vibraphone
12	Marimba
13	Xylophone
14	Tubular Bells
15	Santur

### Organ

16	Hammond Organ
17	Percussive Organ
18	Rock Organ
19	Church Organ
20	Reed Organ
21	Accordion
22	Harmonica
23	Bandoneon

**Guitar**

24	Acoustic Guitar (nylon)
25	Acoustic Guitar (steel)
26	Electric Guitar (jazz)
27	Electric Guitar (clean)
28	Electric Guitar (muted)
29	Overdriven Guitar
30	Distortion Guitar
31	Guitar Harmonics

**Bass**

32	Acoustic Bass
33	Electric Bass (finger)
34	Electric Bass (pick)?
35	Fretless Bass
36	Slap Bass 1
37	Slap Bass 2
38	Synth Bass 1
39	Synth Bass 2

**String Solo**

40	Violin
41	Viola
42	Cello
43	Contrabass
44	Tremolo Strings
45	Pizzicato Strings
46	Orchestral Harp
47	Timpani

**Choral Ensemble**

48	String Ensemble 1
49	String Ensemble 2
50	SynthStrings 1
51	SynthStrings 2
52	Choir Aahs
53	Voice Oohs
54	Synth Voice
55	Orchestra Hit

**Brass-wind Instrument**

56	Trumpet
57	Trombone
58	Tuba
59	Muted Trumpet
60	French Horn
61	Brass Section
62	Synth Brass 1
63	Synth Brass 2

**Whistle Instrument**

64	Soprano Sax
65	Alto Sax
66	Tenor Sax
67	Baritone Sax
68	Oboe
69	English Horn
70	Bassoon
71	Clarinet

**Wind Instrument**

72	Piccolo
73	Flute
74	Recorder
75	Pan Flute
76	Bottle Blow
77	Skakuhachi
78	Whistle
79	Ocarina

**Synth Lead**

80	Lead 1 (square)
81	Lead 2 (sawtooth)
82	Lead 3 (calliope lead)
83	Lead 4 (chiff lead)
84	Lead 5 (charang)
85	Lead 6 (voice)
86	Lead 7 (fifths)
87	Lead 8 (bass+lead)

**Syntonic Tone**

88	Pad 1 (new?age)
89	Pad 2 (warm)
90	Pad 3 (polysynth)
91	Pad 4 (choir)
92	Pad 5 (bowed)
93	Pad 6 (metallic)
94	Pad 7 (halo)
95	Pad 8 (sweep)

**Synthetic Special Effect**

96	FX 1 (rain)
97	FX 2 (soundtrack)
98	FX 3 (crystal)
99	FX 4 (atmosphere)
100	FX 5 (brightness)
101	FX 6 (goblins)
102	FX 7 (echoes)
103	FX 8 (sci-fi)

**Folk Musical Instrument**

104	Sitar
105	Banio
106	Shamisen
107	Koto
108	alimba
109	Bagpipe
110	Fiddle
111	Shanai

**Percussion Music**

112	Tinkle Bell
113	Agogo
114	Steel Drums
115	Woodblock
116	Taiko Drum
117	Melodic Tom
118	Synth Drum
119	Reverse Cymbal

## Sound Effects

120	Guitar Fret Noise
121	Breath Noise
122	Seashore
123	Bird Tweet
124	Telephone Ring
125	Helicopter
126	Applause
127	Gun shot

## Rhythm List

0	Beguines Wing
1	Beguine 2
2	Beguine 3
3	Pop hit
4	Pop
5	Pop Malay
6	Bossa nova
7	Disco 1
8	Disco 2
9	Blue grass disco
10	Waltz 1
11	Waltz 2
12	True ballad waltz
13	Bossa Waltz
14	Easy Waltz
15	Shuffle Waltz
16	Reggae Waltz
17	Rumba Waltz
18	March 1
19	March 2
20	Rumba 1
21	Rumba 2
22	Slow 1
23	Slow 2
24	Disco cha cha
25	Guala cha
26	Char
27	Samba 1
28	Samba 2
29	Ubminimal
30	8Bit 1
31	8Bit 2
32	16Bit 1
33	16bit 2
34	Ballad 16T
35	Country 16T
36	Tango 1
37	Tango 2
38	Polka 1
39	Polka 2
40	Pop Swing
41	Easy Swing
42	Soft Swing
43	Rock 1

44	Rock 2
45	Rock 3
46	Airy Rock
47	Heart Rock
48	Rock & Roll
49	Urban Rock
50	Ballad
51	Jazz Ballad
52	C. Ballad
53	J. Ballad
54	60s Slow Ballad
55	Piano Ballad
56	50s Ballad
57	Snake Base
58	Happy Blues
59	Old Blues
60	Blue Gras
61	Boodie 1
62	Boodie 2
63	Boodie 3
64	Shuffle 1
65	Shuffle 2
66	Dream Shuffle
67	Country Shuffle
68	Quick Shuffle
69	Reggae Shuffle
70	R&B
71	Reggae 1
72	Reggae 2
73	Reggae 3
74	Salsa 1
75	Salsa 2
76	Salsa 3
77	Tecno 1
78	Tecno 2
79	Funky 1
80	Funky 2
81	Dixie 1
82	Dixie 2
83	Foxtrot 1
84	Foxtrot 2
85	R. roll 1
86	R. roll 2
87	Fast Beat
88	Quick Beat
89	Smooth Beat
90	Square Beat
91	Euro Beat
92	Alpha Dance
93	Beta Dance
94	Dream Dance
95	Dance 1
96	Dance 2
97	Dance 3
98	RAP
99	The Country
100	Country Shuffle
101	Electric Keys
102	Dark Keys
103	Easy Walk
104	Destiny

105	Comedy
106	Drive
107	Liquid Nova
108	Indonesian folk
109	Absolute Music
110	Jamaica
111	Synthesis
112	Feel
113	Accelerate
114	Beach Night
115	Irish
116	Tarantella
117	Big band
118	Dan
119	Fusion
120	Horse
121	Canon
122	Latin
123	Mambo
124	New age
125	Slow rc
126	Soul
127	Twist

