 


Digital Piano

USER MANUAL

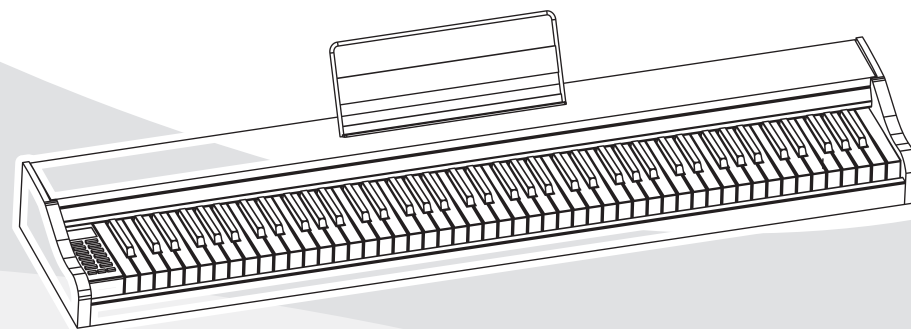



Thank you for purchasing this digital piano from our company.
Elegant and sophisticated, this digital piano is the perfect combination of the latest electronic technology.
♦This instruction manual must be read carefully before using this instrument.



Use DREAM audio source.

Its core uses the French DREAM top sound source, digital sampling, for your performance to bring realistic listening experience.



Qwerty keyboard

The 88-key QUS keyboard gives you the real feeling of playing on a grand piano.



Headphone jack

 
External headphone jack for easy playing without affecting others.

Special reminder:

This product is an electronic electro-acoustic instrument product, after the power in the speaker (two speakers or one of the speakers, or plug headphones) a little current sound is a normal phenomenon. During use, please stay away from "radio, TV, antenna receiver, router, refrigerator, TV, electrical appliances with motors and other RF electrical interference sources."



Installation Guide:

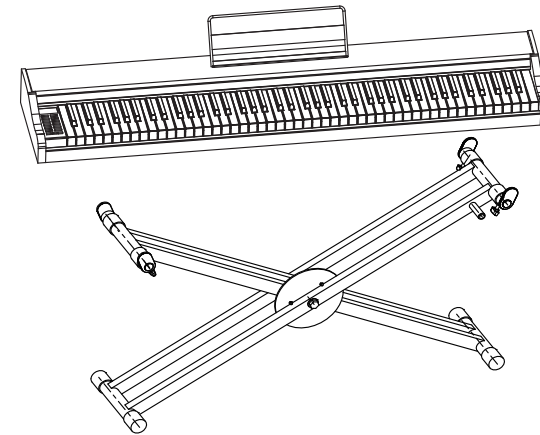


Installation steps:

1. Adjust the piano stand to the appropriate height, and there are two non-slip blocks on the left and right of the piano stand to prevent the piano from slipping.
2. Put the piano on the piano stand, pay attention to the ground should be smooth, to prevent the piano will not shake.

Note:

 The piano stand is not included and needs to be purchased separately!

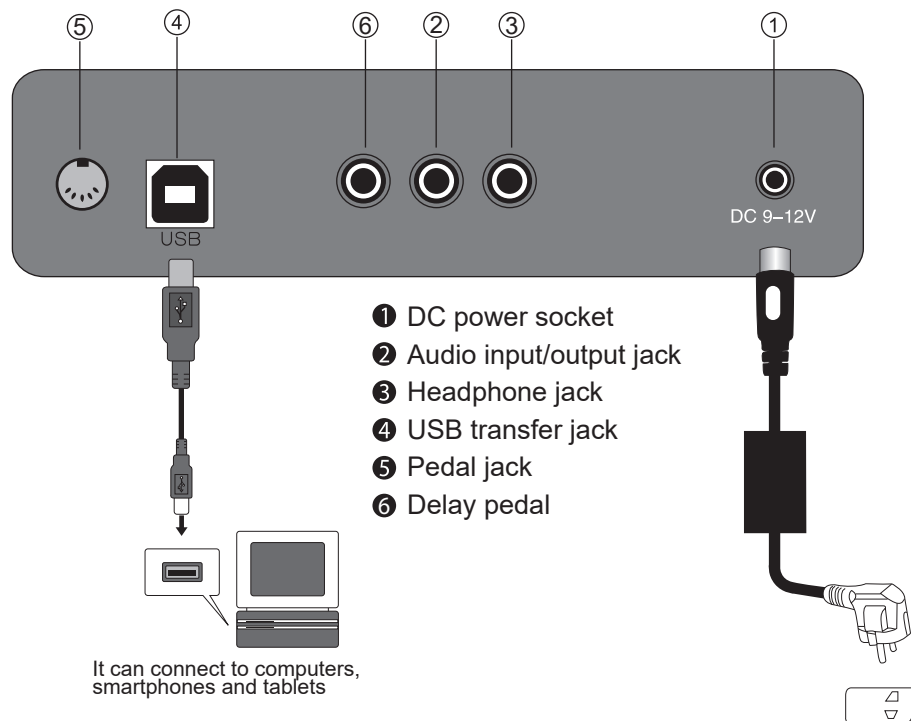

1 Power line connection

1. Connect the power cable according to the figure. Insert one end into the power socket in the operating board at the bottom of the piano and the other end into the 100-240V household power socket. (Figure 1)
2. If you do not use this product for a long time, unplug the power cable and keep it properly.

2 Audio input/output plug

1. Audio output jack can be external large speaker equipment. (Figure 2)
2. the audio input jack can connect the external sound source to the electric piano for playback. (Figure 2)

3 Headphone jack

 
Connecting the earphones will automatically cut off the output of the keyboard's built-in speakers, making it easy to play without disturbing others. This jack can also be used as an audio output interface. (Figure 3)

4 USB transfer interface

The USB transmission interface of this digital piano can be connected to the computer. Through the pre-installed music software on the computer, learn or play the keyboard for performance, composition, storage and other functions. The edited music and the accompaniment built in the music software can be connected to the digital piano through the software for playback, or play according to the accompaniment music. (Figure 4)

5 Pedal connection

Plug the pedal wire end into the round socket at the bottom of the piano to access 3 pedal sound effects! (Figure 5)

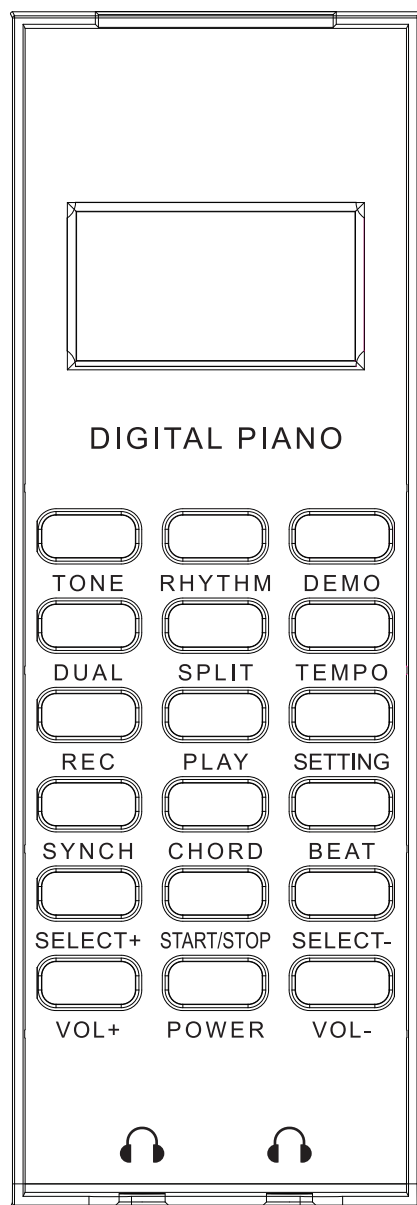

- Keyboard: 88 keys standard keys.
- Timbre: 128 timbre (001-128).
- Rhythm: 100 rhythms (001-100).
- Demonstration songs: 88 songs (01-88).
- Output function: three digit display.
- Timbre control: Double timbre. A double keyboard. A metronome.
- Chord Control: Sync. Single finger. Polyfingered chords.
- Recording control: powerful program recording playback function.
- Bluetooth connectivity.
- Foot control: Sound delay can be achieved. Delay sound. The sound reduction function.
- Other ports: USB port. Audio input/output interface, power interface. The headphone jack. Pedal interface.



1 Piano performance

1. Press the "Power" switch to the open position, "Digital display 001" lights up, you can enter the performance state.
 2. Play music on the piano keyboard.
 3. Turn off the power when not in use.
- The processor chip of this product is complex, similar to computer system, sometimes it cannot respond, please turn off the power switch and then open it to work normally.

2 Volume adjustment

Press "VOL+" or "VOL -" to increase or decrease the piano volume, please adjust the volume to a satisfactory position.

3 Instrument timbre selection

1. Press the "Tone" button to enter the tone mode.
2. Press "Select +" or "Select-" to select any timbre, and the corresponding timbre number will be displayed digitally.
3. Find the timbre you need in the appendix timbre list. A total of 128 tones.

NOTE!

- Whenever you turn on the digital piano, the initial preset is "piano" tone.

4 Rhythm selection

- "Start/Stop"
- 1, press the "Rhythm" button to enter the rhythm mode.
 2. Press "Select +" or "Select -" to select any rhythm, and the corresponding rhythm number is displayed.
 3. Press the rhythm "Start/Stop" button to start playing the selected rhythm. To stop the rhythm, press "Start/Stop" again.
 4. Find the rhythm you need in the appendix rhythm list. There are 100 different rhythms.

5 Beat speed control

 
1. Press the "TEMPO" button and then "Select+" or "Select-" to adjust the speed.
2. Speed control options (30-240). After power-on, the default value is in paragraph 120.
3. Press and hold "Select +" to continuously increase the speed, and press and hold "Select-" to continuously reduce the speed.



6 Chords accompaniment

1. Select the rhythm you want to play, specifically refer to the fourth point "rhythm selection" operation.
2. Press the "Chord" button to enter the chord state.
 - The chords with multiple single fingers are used. If the chords with multiple fingers are played, the piano responds to the chords with multiple fingers. Where the playing method does not conform to the multi-fingered chord, the response is identified by the single-fingered chord.
3. Playing chords can be played on the accompaniment keyboard (1-34 keys from left) according to different fingerings.
4. Press the "Chord" button again to close the chord state.

Automatic accompaniment keyboard

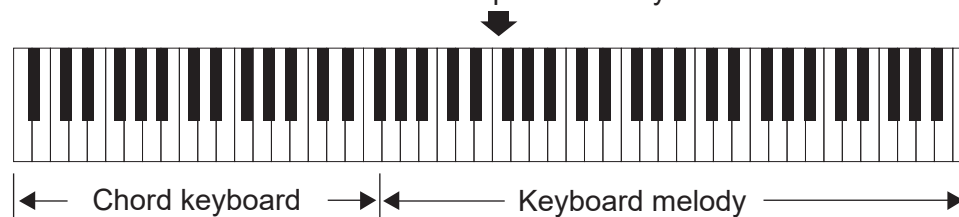

7 Synchronous start

Before starting, first choose the rhythm to use, set the speed value and select the chord accompaniment.

1. In the rhythm state, press the "Sync" button to make it enter the synchronous startup standby state.
2. Play any key, the accompaniment will automatically start playing.
3. To cancel the synchronization state, press the "Start/Stop" button.

8 Set/force function

1. Press the "Setting" button for the first time, and then press "Select +" or "Select -" to select the force to open or close.
2. Press the "Setting" button a second time, and then press "Select +" or "Select -" to select a different rhythm volume (1-16).
3. Press the "Setting" button for the third time, and then press "Select +" or "Select -" to select different shifts (-12 —12).



9 Metronome function

Press the "BEAT" button to activate the metronome function, display the current beat digitally, and press the button again to change the number of beats accordingly (1/4-2/4-3/4-4/4-off)

10 Built-in demo

1. Press the "DEMO" button to display the number of the current demonstration song and start playing the demonstration song. Press this key again to stop.
2. To enter the demonstration song mode, you can also select different demonstration songs by "Select+" and "Select-".
3. Find the song you need in the appendix song list.

NOTE!

- The product's built-in music library contains 88 songs. The built-in music can be played and enjoyed, or the melody can be followed on the keyboard with the learning function.

11 Recording function

1. Keyboard note recording: Press the "REC" button to enter recording mode and play the keys to enter note recording. Press the Record button again to stop recording.
- Keyboard note recording mode can change the "TONE" to record, can record 10000 notes.
2. Playback: Press the "PLAY" button to play the recorded notes.

 
12 Dual keyboard

1. First enter the tone mode and select a musical instrument as the main tone.
2. Press the "SPLIT" button to enter the split tone selection mode.
3. Use the "Select +" button or "Select -" to select another instrument as the split tone.



4. Play notes on the keyboard. At this time, the left and right sides of the keyboard emit corresponding musical instrument sounds.
5. Press the "SPLIT" button again to cancel the keyboard split and return to the normal keyboard state.
- Using the dual keyboard function, you can assign two different timbre (main and split) to each end of the keyboard, so you can play one timbre with your left hand and the other with your right hand for an ensemble effect.

Double keyboard

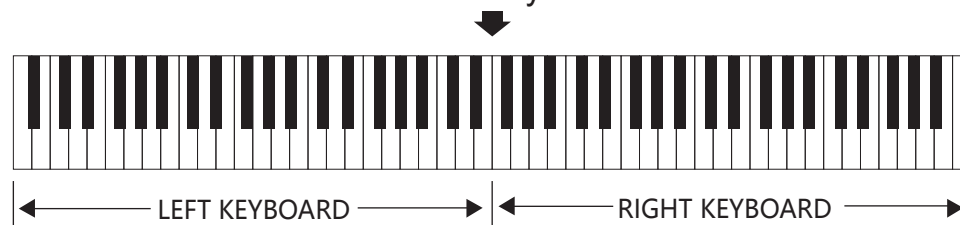

13 Dual tone

1. First enter the tone mode and select a musical instrument as the main tone.
2. Press the "DUAL" button to enter the second tone selection mode.
3. Use the "Select +" button or "Select -" to select another instrument as the second tone.
4. Play notes on the keyboard, at this time playing the keyboard can simultaneously emit two corresponding resonant timbre.
5. Press the "DUAL" button again to stop the function and return to the normal tone state.
- The use of double tone function can mix two different tone colors together to make a common sound, can be mixed arbitrarily, to create a new tone of musical instrument resonance.

14 Bluetooth connection

1. Audio Bluetooth: Open the Bluetooth function of the mobile phone, pair the corresponding Bluetooth name, enter the password "8888" Bluetooth connection successfully, you can play music on the piano.
2. Data Bluetooth: Open the mobile phone blue function, pair the corresponding Bluetooth name, and use the music APP of the mobile phone and other devices after the Bluetooth connection is successful. Practice songs on piano games.



TONE

number	name		guitar
	piano	025	Nylon Guitar
001	Acoustic Grand Piano	026	Metal string guitar
002	Bright Acoustic Piano	027	JAZZ GUITAR
003	Electric Grand Piano	028	Voiceless electronic guitar
004	Honky-tonk Piano	029	Weak electronic guitar
005	Chorused Piano	030	Over speed guitar
006	Harpsichord	031	DISTORTION GUITAR
007	Clavichord	032	Harmonic guitar
008	Kravina		Bass
		033	True Sound Bass
	carillon	034	Tanzhi Bass
009	celesta	035	Electronic Bass
010	Zhong Qin	036	Cordless bass
011	Octopus Box	037	Beat Bass 1
012	TikTok	038	Beat Bass 2
013	Malimba	039	Synth Bass 1
014	Muqin	040	Synth Bass 2
015	Bell tube bell		String music
016	Desima Qin	041	violin
		042	viola
	organ	043	cello
017	Hand Organ	044	double bass
018	Percussion Organ	045	TikTok Violin
019	Rock organ	046	Pizzicato Strings
020	Church Organ	047	Orchestral harp
021	Spring Organ	048	timpani
022	Accordion		Ensemble
023	Harmonica	049	Strings 1
024	Tango Accordion	050	Strings 2



051	Synth Strings 1	078	vertical bamboo flute
052	Synth Strings 2	079	whistle
053	Ah Sheng Chorus	080	Okalina
054	Oh, choir		Synthetic orchestral music
055	Polyphonic	081	Fangbo Wind Music
056	Pop Orchestra	082	Sawtooth wave orchestral music
	brass music	083	Goddess Wind Music
057	trumpet	084	Bird singing and wind music
058	Trombone	085	Charan Orchestra
059	Large	086	Vocal orchestral music
060	muted trumpet	087	Fifth degree wind music
061	French horn	088	Bass Orchestra
062	BRASS ENSEMBLE		Synth Voice
063	SYNTH BRASS 1	089	century
064	SYNTH BRASS 2	090	Warmth Song
	wind instrument	091	Polyphonic synthesis
065	Direct management of saxophone	092	Choir mat
066	Treble saxophone	093	bowstring
067	Baritone saxophone	094	METAL PAD
068	Bass Saxophone	095	Annular pad
069	oboe	096	Brushing
070	English horn		composition effect
071	bassoon	097	sound of rain
072	clarinet	098	Cinematic effect
	Woodwind instruments	099	crystal
073	piccolo	100	atmosphere
074	flute	101	bright
075	Ancient flute	102	spirit
076	panpipe	103	echo
077	Bottle wooden tube	104	Cosmic sound



RHYTHM

105	Sitar
106	banjo
107	shamisen
108	guzheng
109	Caringbah
110	air whistle
111	Federick violin
112	Sana
	Percussion instrument
113	Crispy bell
114	Ah, grasshopper
115	Metal drum
116	Wooden drum
117	Japanese drum
118	Wonderful Tonggu
119	Synthetic drum
120	Reverberant cymbal
	Sound effect
121	String noise
122	breath sounds
123	The sound of waves
124	Birdsong
125	Telephone ring
126	Aircraft sound
127	cheer
128	shot

number	name
	Country
01	Country 16T
02	Country Ballad
03	Country Shuffle
04	Dream Shuffle
05	Dream Shuffle Waltz
06	Fast Beat
07	Fast Shuffle
08	HI Shuffle
09	Quick Beat
10	Quick Shuffle
11	Blue Grass Shuffle
12	Slow Pure
13	The Village
14	Unplugged 16T
15	Blue Grass
16	ballad 16T
	Jazz/Blues
17	Bossa Jazz
18	Bossa Jazz Pad
19	Even Blue
20	Even Blue B
21	Even Jazz
22	Flow Shuffle
23	Fusion Shuffle
24	Happy Blues
25	Jazz Ballad
26	Jazz Waltz
27	Jazz Latin Fusion



28	Old Blues	57	Relaxed Waltz
29	Piano Blues	58	Sentiment
30	Quick Swing	59	Simple Way
31	Slow Blues	60	Slow Ballad
32	Stiff shuffle	61	Smooth Beat
33	Vintage Jazz B	62	Snake Base
34	Swing Pad	63	Toms
35	Swing	64	Toms B
36	Swing2	65	True Ballad
37	Swing Pad3_4	66	True Ballad Waltz
38	Tale Swing	67	Two Guitars
39	Vintage Jazz	68	Toms C
	POP	69	Unwind
40	A New Start		ROCK
41	Accelerate	70	Airy Rock
42	Ballad	71	Bass Up
43	Coulombs	72	Dirty Shuffle
44	Drive	73	Flat Rock
45	Feel	74	Flow Rock
46	Epiano	75	Ground State
47	Fast Pop	76	Heart Rock
48	GoodTime	77	Light Rock
49	Move On	78	Old Rock Ballad
50	Mystic Ballad	79	Quarter Rock
51	Piano Ballad	80	Rock Base
52	Piano Energy	81	Rock Base B
53	Piano Peace	82	Rock Base C
54	Pop Hit	83	Rock Base D
55	Pop Pad	84	Rock Base E
56	Relaxed	85	Rock Base F

DEMO List

[illegible]

number	name
01	dream of
02	The mark of rain
03	Arabic Style Song No1
04	Pathetique Sonata Third Movement
05	FOR ELISE
06	let's row our boats
07	Flower Fairy
08	William Tell Overture
09	The Blue Danube
10	The sound of snow falling
11	childhood
12	Love And Passion
13	Little Star
14	Canon
15	Skip to my lou
16	AMERICAN PATROL
17	Turkey In the Straw
18	Yankee doodle
19	years ago
20	Mary Had A Little Lamb
21	Old_Black_Joe
22	Romeo and Juliet
23	Two Tigers
24	My_Bonnie
25	Row, Row, Row Your Boat
26	christmas
27	Happy clapping song
28	jingle bells
29	croatian rhapsody

30	on the moon	60	La Viollette
31	The Song of Leo	61	Claire De Lune
32	Sandcastle	62	Chopin Nocturne Op. 9
33	It' s a small world	63	Melody F
34	Moonlight in Lotus Pond	64	Rondo K. V. 485
35	Hongyan	65	Tango Espana
36	Mozart Symphony No. 40	66	LiebesträumeNr. 3
37	Rock A ByeBaby	67	Londonderry Air
38	Red River Valley	68	Green sleeves
39	Clarinet Polka	69	Souvenir De Moscou op. 6
40	old macdonald had a farm	70	Leggenda Valacca
41	The wheels ong the bus	71	Wild bees fly
42	Carmen	72	March in D
43	Apple Round, Apple Red	73	To a Wild Rose
44	Little Bee	74	Cherny 599-001
45	london bridge	75	Cherny 599-002
46	Look At All The Colors I Can See	76	Cherny 599-003
47	Menuetto	77	Cherny 599-004
48	Bingo	78	Cherny 599-005
49	Spanish Bullfighter March	79	Cherny 599-006
50	Prelude(Wohltemperierte Klavier 1-1)	80	Cherny 599-007
51	six little ducks	81	Cherny 599-008
52	romance de amor	82	Cherny 599-009
53	dance of fireflies	83	Cherny 599-010
54	Riding on the wings of that song	84	Cherny 599-011
55	The Maiden' s Prayer	85	Cherny 599-012
56	The Entertainer	86	Cherny 599-013
57	Premiere arabesque	87	Cherny 599-014
58	Aura Lee	88	Cherny 599-015
59	Honky-Tonk		



Do a good job of the product maintenance and protection work, to prolong the service life of the product, reduce the fault has a very important role.

1 Avoid heat, moisture or direct sunlight

Do not overexpose the product to direct sunlight, or place it near air conditioning, or in extremely hot places.

2 Do not use near TV or radio

This product may cause video or audio interference to TV and radio reception. If this happens, the product should be removed from the TV or radio. Do a good job of the product maintenance and protection work, to prolong the service life of the product, reduce the fault has a very important role.

3 Do not use paint, thinner or similar chemicals for cleaning

Clean the product with a soft cloth moistened with a weak aqueous solution and a neutral detergent. Soak the cloth in the solution and wring until it is nearly dry.

4 Do not shake, avoid collision

The product should be carefully handled when moving, and violent vibration and collision are strictly prohibited to avoid damage to the shell or the internal electronic components.



One finger chord table

YAMAHA One finger chord table example

	M	m	7	m7
C				
C#				
D				
D#				
E				
F				
F#				
G				
G#				
A				
A#				
B				



Multifingered chord table

Chord Type Root	M	m	7	m7	dim7	M7	m7-5	dim
C								
C [♯] /(D [♭])								
D								
(D [♯])/E [♭]								
E								
F								
F [♯] /(G [♭])								
G								
(G [♯])/A [♭]								
A								
(A [♯])/B [♭]								
B								



MIDI Message

Function		Midi Out	Midi In	Remarks
Basic Channel	Default	1	1 ~ 16	
	Changed	1 ~ 16	1 ~ 16	
Mode		Mode3	Mode3	
Note Number		21 ~ 109	21 ~ 109	
Velocity	Note On	V = 1 ~ 127	V = 1 ~ 127	
	Note Off	8nH V= 64	9nH V= 0, 8nH V=XX	XX:
Pitch Bend		X	O	
Control Change	1	X	O	Modulation
	7	X	O	Volume
	10	X	O	Pan
	1	X	O	Expression
	64	O	O	Sustain
	67	O	O	Soft Pedal
	121	X	O	Reset All Controller
Program Change	123	X	O	All Sound Off
		0 ~ 127	0 ~ 127	
Aux Messages	Local On/Off	X	X	
	All notes Off	X	O	
	Active Sense	X	O	
	Reset	X	X	

**Power**

This product can be powered by standard indoor wall sockets, please use only 3C certified power adapters that meet the standard requirements. When not in use temporarily, please turn off the power. When not in use for a long time, please unplug the power cable and keep it properly.

**Mark**

In order to ensure your safe and correct use of the product, to prevent harm to users and others and financial damage, this manual and the product are marked with a series of safety marks. The symbols and their meanings are as follows:

**Warning**

This mark indicates that there is a potential danger of death or serious injury if the mark is ignored and the product is incorrectly operated.

**Attention**

This mark indicates that there is a potential danger of personal injury or other financial damage if the mark is ignored and the product is operated incorrectly.

Sign sample

This triangle flag () represents what users should be aware of. (The left example is careful electric shock)



Circular signs () with slash lines indicate prohibited items. A graphic representation in or next to a sign indicating specific prohibited content. (For the left example, disassembly is prohibited)



Black dots () indicate things that must be observed. The icon in this sign represents the content of a specific, subject matter to be complied with. (The left example is that the power plug must be pulled out of the socket)

**Warning****Smoke, smell, overheating**

When this product smoke, smell or overheat, use may lead to fire and electric shock hazard. If the above situation occurs, perform the following operations immediately.

1. Turn off the power.
2. Remove the plug from the power socket.
3. Contact your distributor

The power cord

- Improper use of power cables may cause fire and electric shock.  The following precautions must be observed.
 - The special power cord specified for this product must be used. 
 - Use an AC power supply whose output voltage is within the rated of the household voltage.
 - Do not overload power sockets and power extension cords. 
- Improper handling of power cables, resulting in damage or breakage, may cause fire and electric shock. The following precautions must be observed.
 - Do not place heavy objects or heat the power cord. 
 - Do not attempt to modify or excessively bend the power cord.
 - Do not twist or pull the power cord.
 - If the power cable or plug is damaged, replace it with a power cable of the same specification and type. 
- Do not touch the power cord and plug with wet hands, otherwise there is a risk of electric shock. 

- Please use the power cord where water will not splash. Water is a hazard of fire and electric shock. 

- Do not place vases or any other containers containing water on this product. Water is a hazard of fire and electric shock. 

- Do not allow minors to plug or touch the power cord or connecting plate. Minors have no electrical safety knowledge and may cause electric shock. 

**Attention**

- Improper use of power cables may cause fire and electric shock. The following precautions must be observed.
 - Do not place the power cord near the furnace or other heat source.
 - Do not pull the power cord when removing it from the power socket. Must hold the plug body. 
 - The power cord plug must be inserted into the power socket to the end.
 - Make sure the power supply is switched off before connecting or cutting off the power cord. 
 - Unplug the power cord from a wall outlet in the event of a thunderstorm or before traveling or other extended absences.
 - At least once a year, unplug the power cord from the wall outlet and clean the dust that accumulates around the plug.

Do not burn this product

Do not expose the product to fire. Otherwise, wood products will burn and their internal electronic components will explode, resulting in fire and injury risk.

**Water and foreign matter**

Water, other liquids and (metal sheet, etc.) entering the product may cause fire hazard and electric shock.



If the above situation occurs, perform the following operations immediately.

1. Turn off the power.
2. If the power cord is being used for power supply, unplug it from the wall outlet.
3. Contact your dealer.

Dismantlement and transformation

Do not disassemble or modify the product in any way. Otherwise, there is a risk of electric shock, scalding or other personal injury. Delegate all inspections, adjustments and maintenance to your dealer.

**To fall or hit.**

There is danger of fire and electric shock after the product is damaged by falling or strong impact. If the above situation occurs, perform the following operations immediately.



1. Turn off the power.
2. If the power cord is being used for power supply, remove it from the wall outlet.
3. Contact your dealer.

Plastic bags

Do not allow anyone to put this product packaging plastic bag on the head or into the mouth, otherwise there is a risk of suffocation, special attention should be paid to families with young children.

**Keep your distance from this product and support**

Climbing on the piano body or its support can cause it to topple or damage, especially for families with young children.

**Put**

Avoid placing the product on uneven surfaces or in any other unstable place. Otherwise, the product will fall, and there is a risk of injury.

**Product movement**

Before removing the product, unplug the power cord plug from the wall outlet and unplug all other cables and connectors. Otherwise, it may lead to wire damage, fire and electric shock risk.

**Clean**

Before cleaning the product, remove the power cord plug from the wall outlet, otherwise there is a risk of fire and electric shock.

**Interface**

Only specified devices and devices can be connected to the interface of this product. Danger of fire and electric shock when connecting undesignated equipment or devices.

**Location choice**

Avoid placing the product in the following places. Otherwise there is a risk of fire electric shock.



- A hot or dusty place.
- Kitchen or other smoky area.
- Exposure to direct sunlight, or any other place that will cause high temperature of the product.

Volume

Do not play music at high volume for a long time. Be careful when using headphones. Too high a volume can damage your hearing.

**Weight**

Do not place heavy objects on the product. Otherwise, the top of the product will be too heavy, causing the product to tip over or make the objects on it fall off, which may lead to the risk of injury.

**Proper assembly of bracket**

Improper assembly of the bracket will cause it to tip over, causing the product to fall, which may lead to the risk of injury.



Therefore, assembly must be carried out in accordance with the instructions in the accompanying manual to ensure that the product is properly mounted on its bracket.

Safety warning!

Electrical appliances will be aging after long-term use.

It is recommended to test the products regularly after the one-year warranty period is exceeded.

If there is any abnormal phenomenon, please suspend the use and hand over to professional maintenance personnel to avoid safety accidents!

Please cut off the power after each use!

Attachment list

Name	Number
Power charger	1 PCS
Body	1 PCS
Music stand board	1 PCS
Instructions	1 PCS

Instrument parameters

Keys: 88	Intonation: ≤ 3 the sound
Range: A2 ~ C5	Output power : $\geq 15W \times 2$
Style: Portable upright piano	Power supply: DC 12V2A 50/60Hz

Troubleshooting

Fault	Possible causes/Solutions
When the power is switched on, a puffing sound is produced	This is a normal phenomenon, please do not worry
When the power is turned on, pressing the keyboard does not make any sound.	Make sure the main volume control is set in the appropriate position. Or check whether there is any other device connected to the earphone output jack, so the built-in speaker system automatically disconnects
Note quality is slightly different from note quality under the same timbre	This is a normal phenomenon, due to the different timbre sampling range and produce different sound quality
When using the duration function, some timbre duration is long, and some timbre duration is short.	This is normal because the duration of the different timbre of the instrument has been set to the maximum length
The volume is too small	Make sure the master volume control is set in the appropriate position
Some MIDI data cannot be transmitted correctly (even when the MIDI cable is properly connected)	This is a normal phenomenon and is related to the initial setting state of the piano
When using mobile phone or mobile phone close to the horn noise phenomenon will occur	Mobile phones can cause interference. To avoid this noise, turn off your mobile phone or use it away from your keyboard
The pitch of the keyboard does not match the position of the keyboard when it is played.	You may turn on the double keyboard or move the function, at this time turn off the double keyboard or move reset to zero; You can also turn off the power switch to restart.
You can't change the tone while playing, and the pitch of the keyboard doesn't match the actual position of the keyboard	You may turn on the double keyboard function, turn off the double keyboard function at this time; You can also turn off the power switch to restart.
Playing demo song sound distortion or discontinuous	The possible reason is that the over-heated circuit self-protection system of the power amplifier is started due to the long time of high-power playback. At this time, it can be recovered by turning down the volume or turning off the power for a period of time
There are two timbre occurring at the same time	The likelihood is you opened double tone function, close double tone function right now can

Note: The equipment has been tested and complies with national safety regulations and EMC and other relevant regulations. Radio communication may cause interference to the equipment, or the equipment may affect radio or TV reception. Users should take one or more of the following measures to correct interference:

- Reposition or replace the receiving antenna.
- Increased direct isolation between device and receiver.
- The receiver connects the device to sockets on different lines.
- Consult dealers or experienced radio/television technicians.

Warning user: Any unreasonable changes or modifications may affect the normal operation of the device.

Records of the warranty

warranty date	Fault and handling methods	Completion date

Product certificate

Product Name: Digital piano

Product Model:

Factory Date:

Inspector:

Warranty card

Dear users:

Thank you for choosing digital piano series products. When you purchase products, please ask the dealer to fill in the date of purchase, product model and stamp the shop seal, and keep this card properly.

Purchase date	
Product model	
Dealer phone	
Dealership chapter	

THE warranty

1. Under normal circumstances, our factory guarantees the products free of charge for one year from the date of purchase.
2. During the warranty period, if there is any damage caused by use, storage, improper or self-disassembly, the material fee shall be charged accordingly.
3. If the warranty period exceeds, the cost shall be charged accordingly.
4. Please contact the dealer directly for repair service.